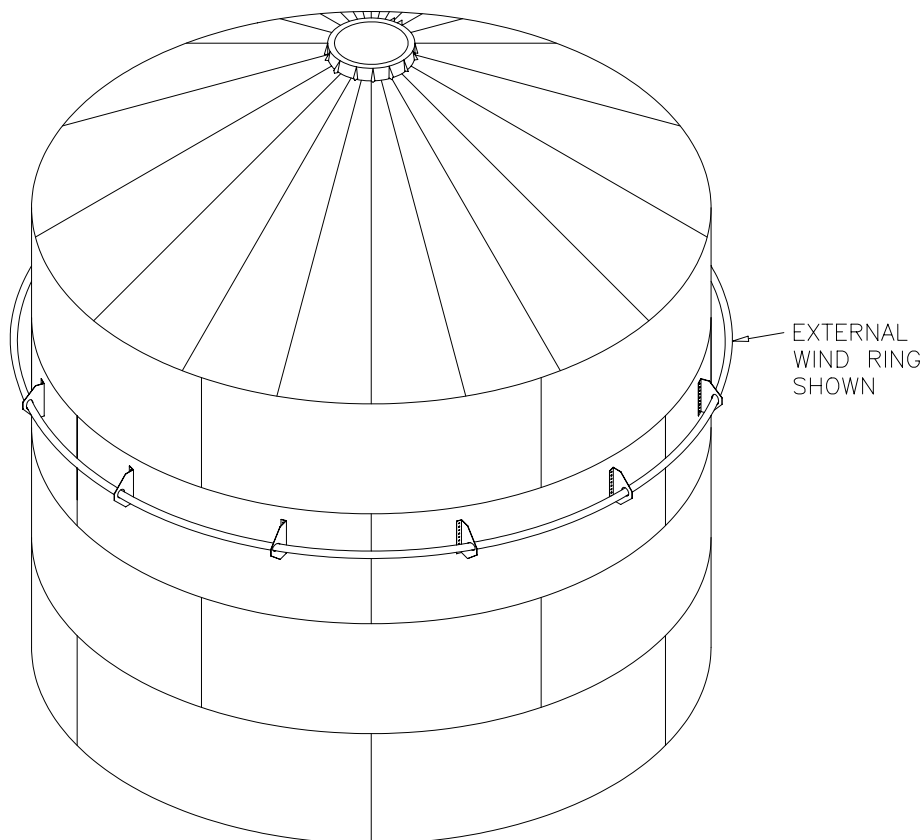


**290818**

R020313

# SCAFCO® WIND RING INSTALLATION INSTRUCTIONS





**TABLE OF CONTENTS**

TABLE OF CONTENTS ..... 1

EXTERNALLY STIFFENED BIN WITH EXTERNAL WIND RING ..... 2


NON-STIFFENED BIN WITH EXTERNAL WIND RING ..... 3

NON-STIFFENED BIN WITH INTERNAL WIND RING ..... 4


INTERNALLY STIFFENED BIN WITH INTERNAL WIND RING ..... 5

INTERNALLY STIFFENED BIN WITH INTERNAL WIND RING AND SIDE DISCHARGE SYSTEM ..... 6

## EXTERNALLY STIFFENED BIN WITH EXTERNAL WIND RING

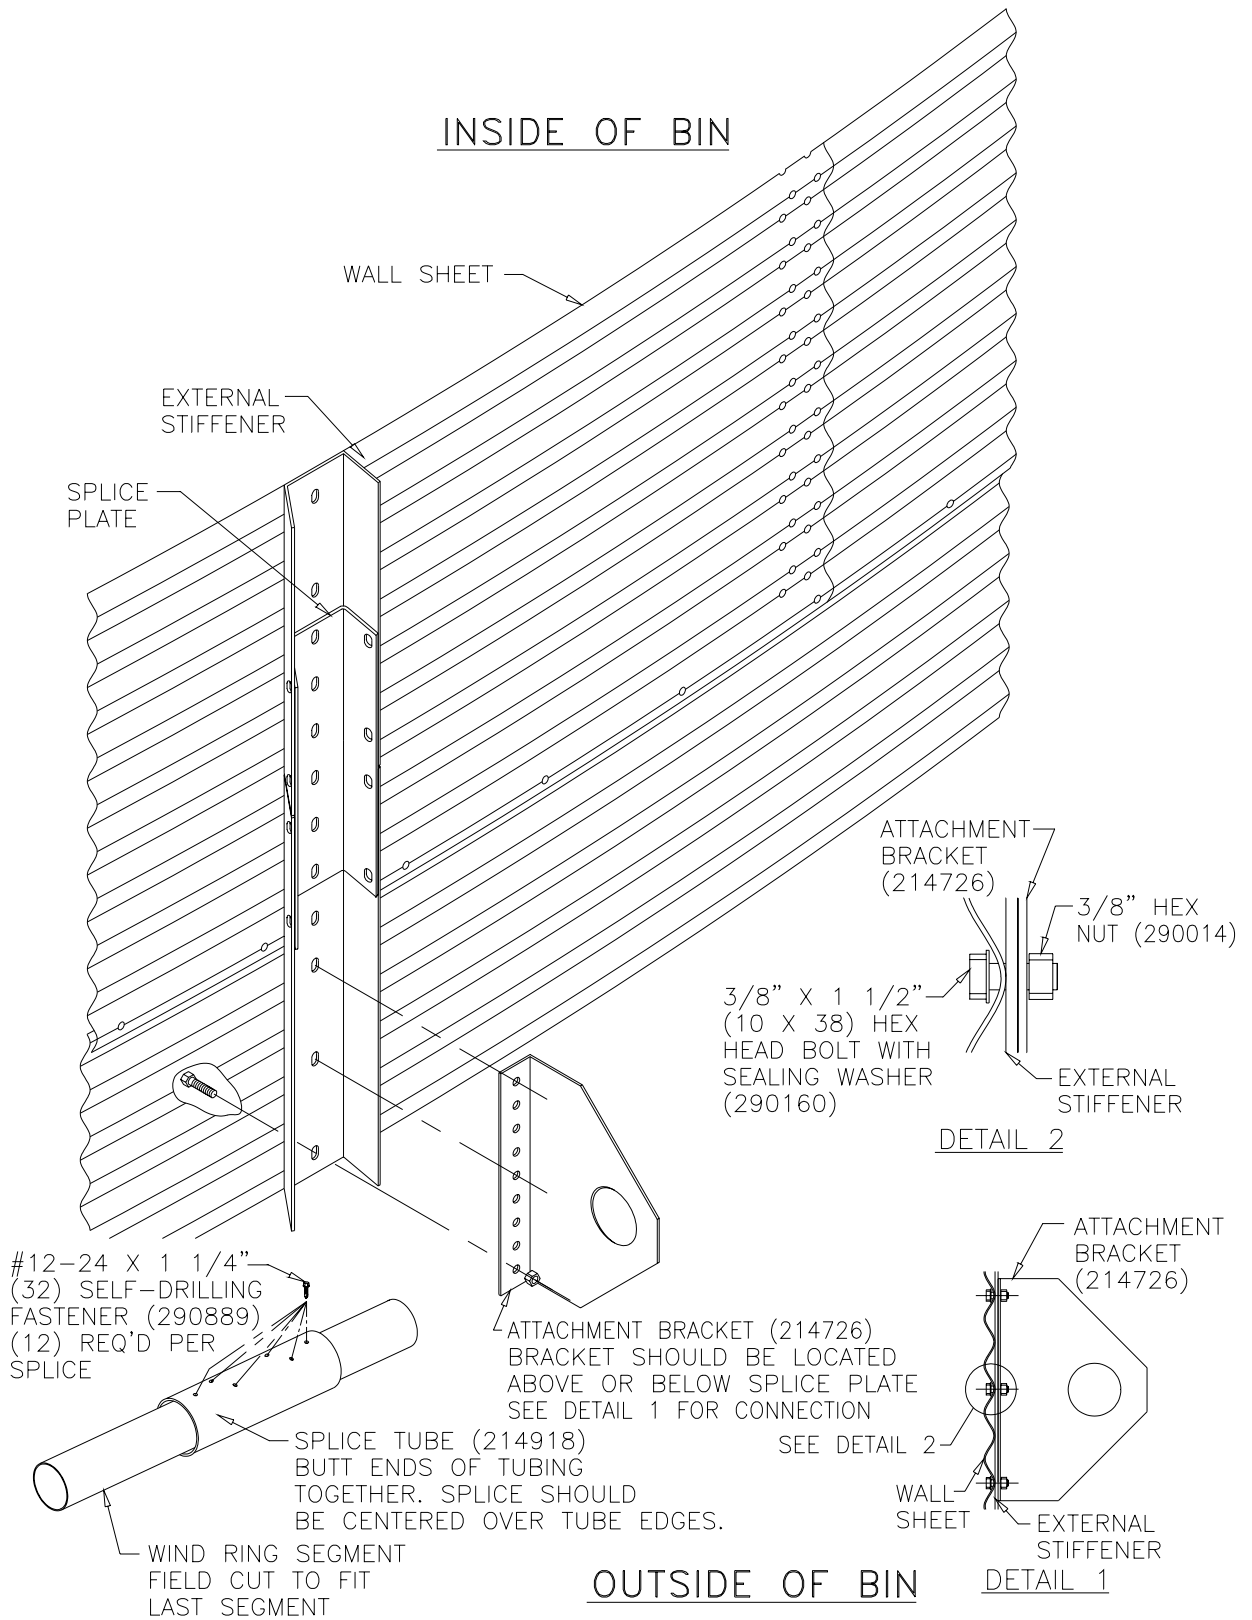


## NON-STIFFENED BIN WITH EXTERNAL WIND RING

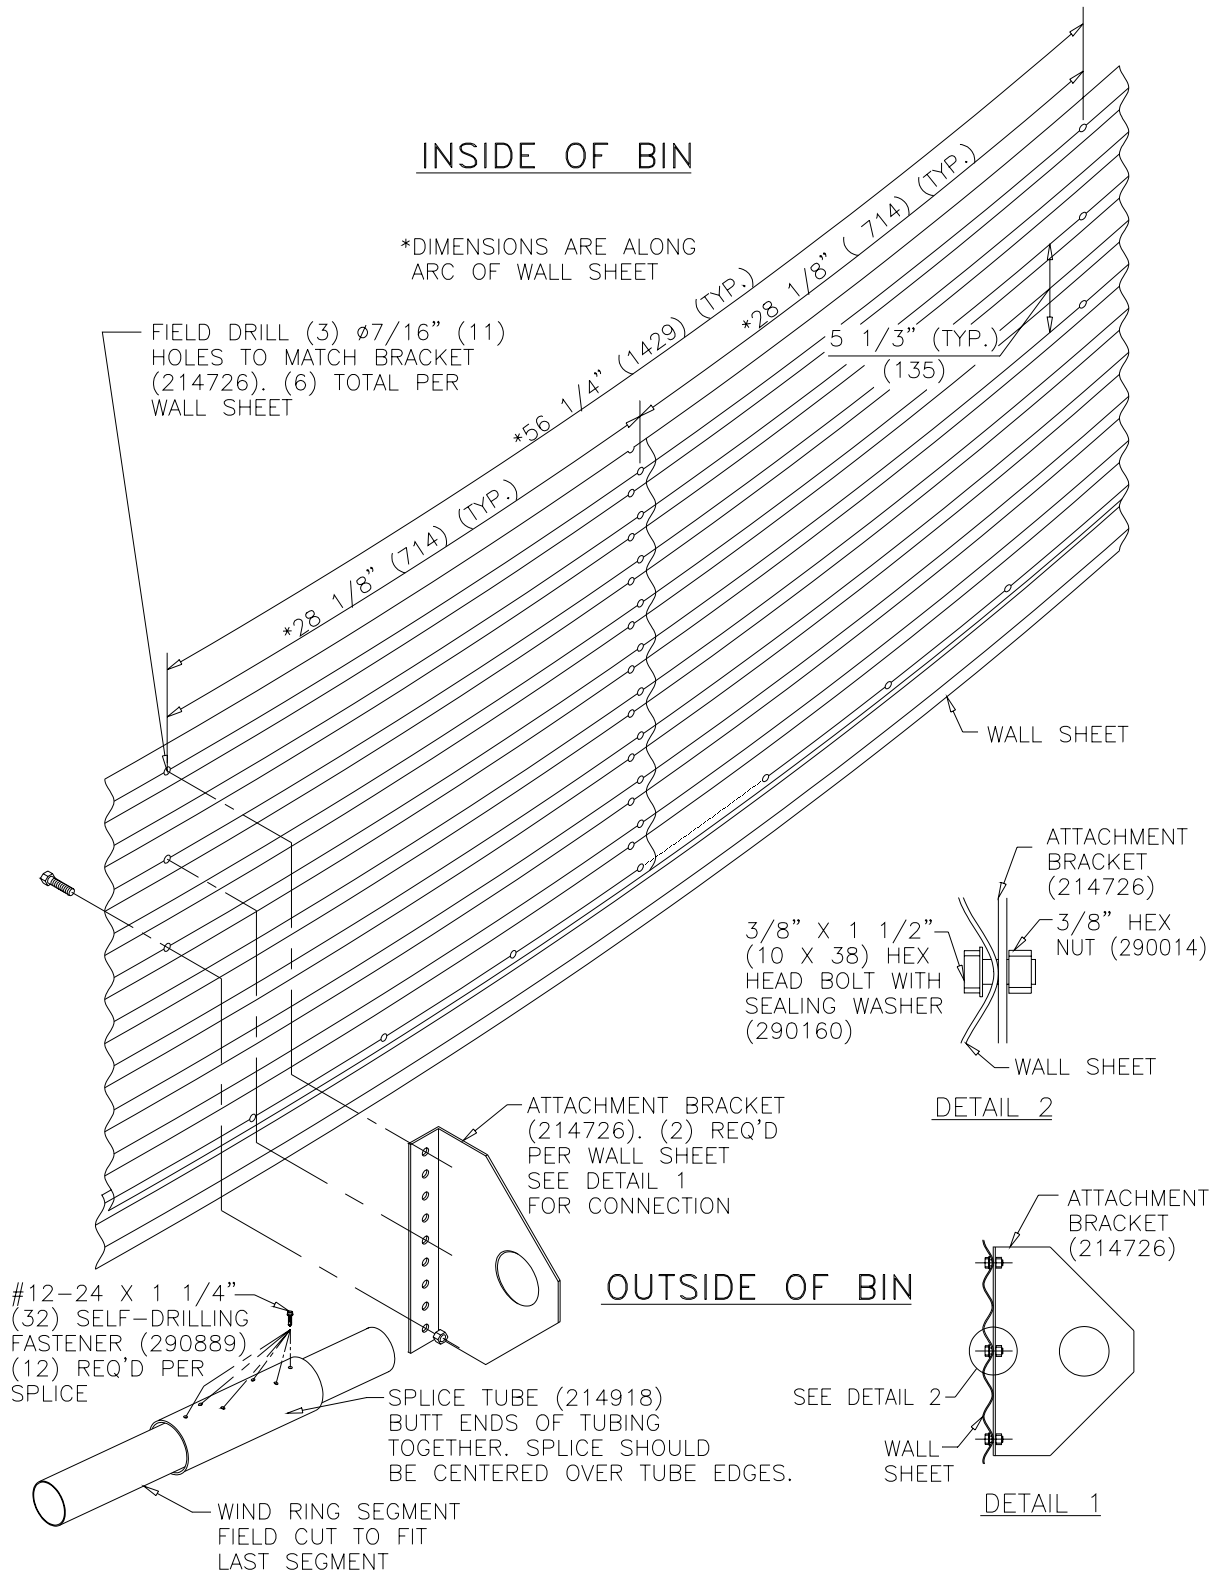


## NON-STIFFENED BIN WITH INTERNAL WIND RING

### OUTSIDE OF BIN


\*DIMENSIONS ARE ALONG  
ARC OF WALL SHEET

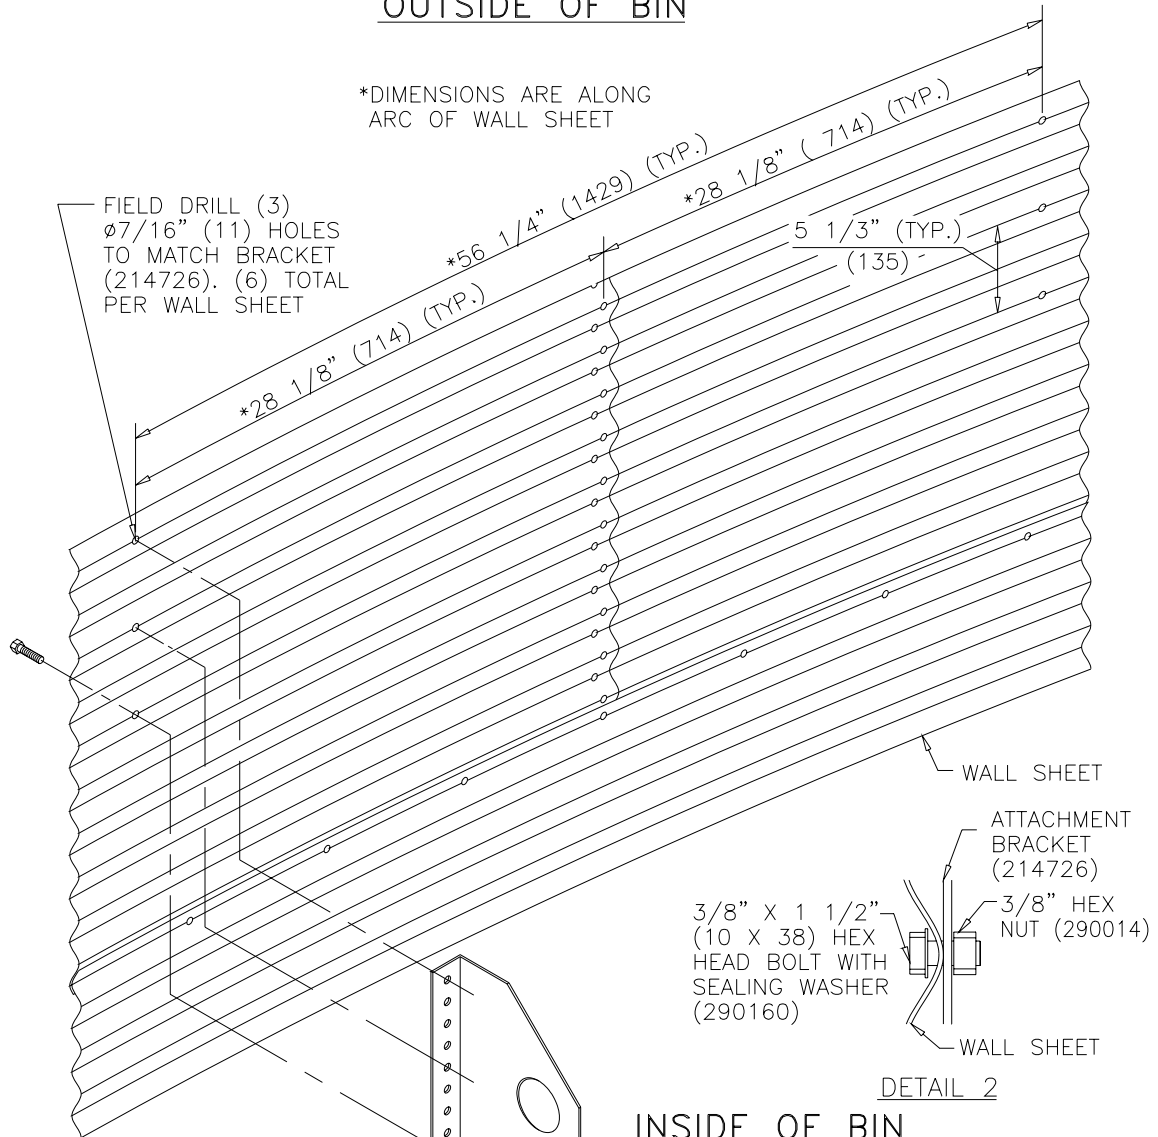


### INSIDE OF BIN

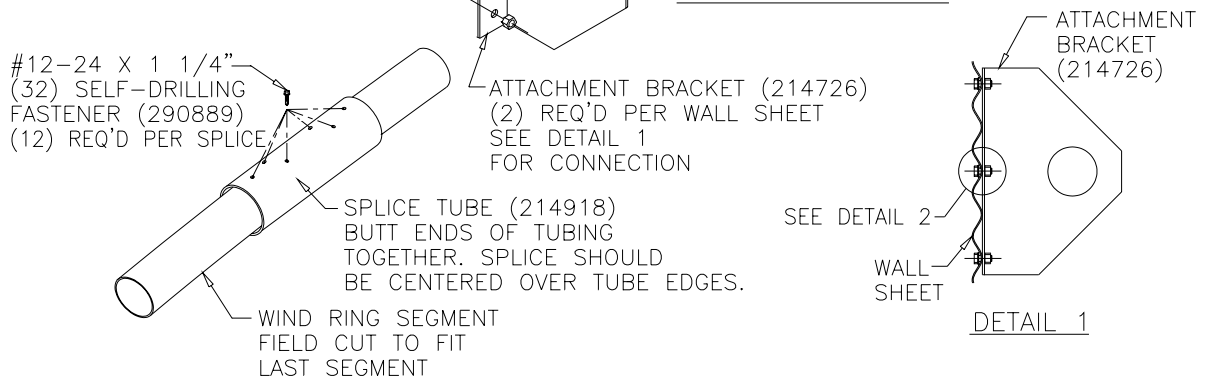

## INTERNALLY STIFFENED BIN WITH INTERNAL WIND RING

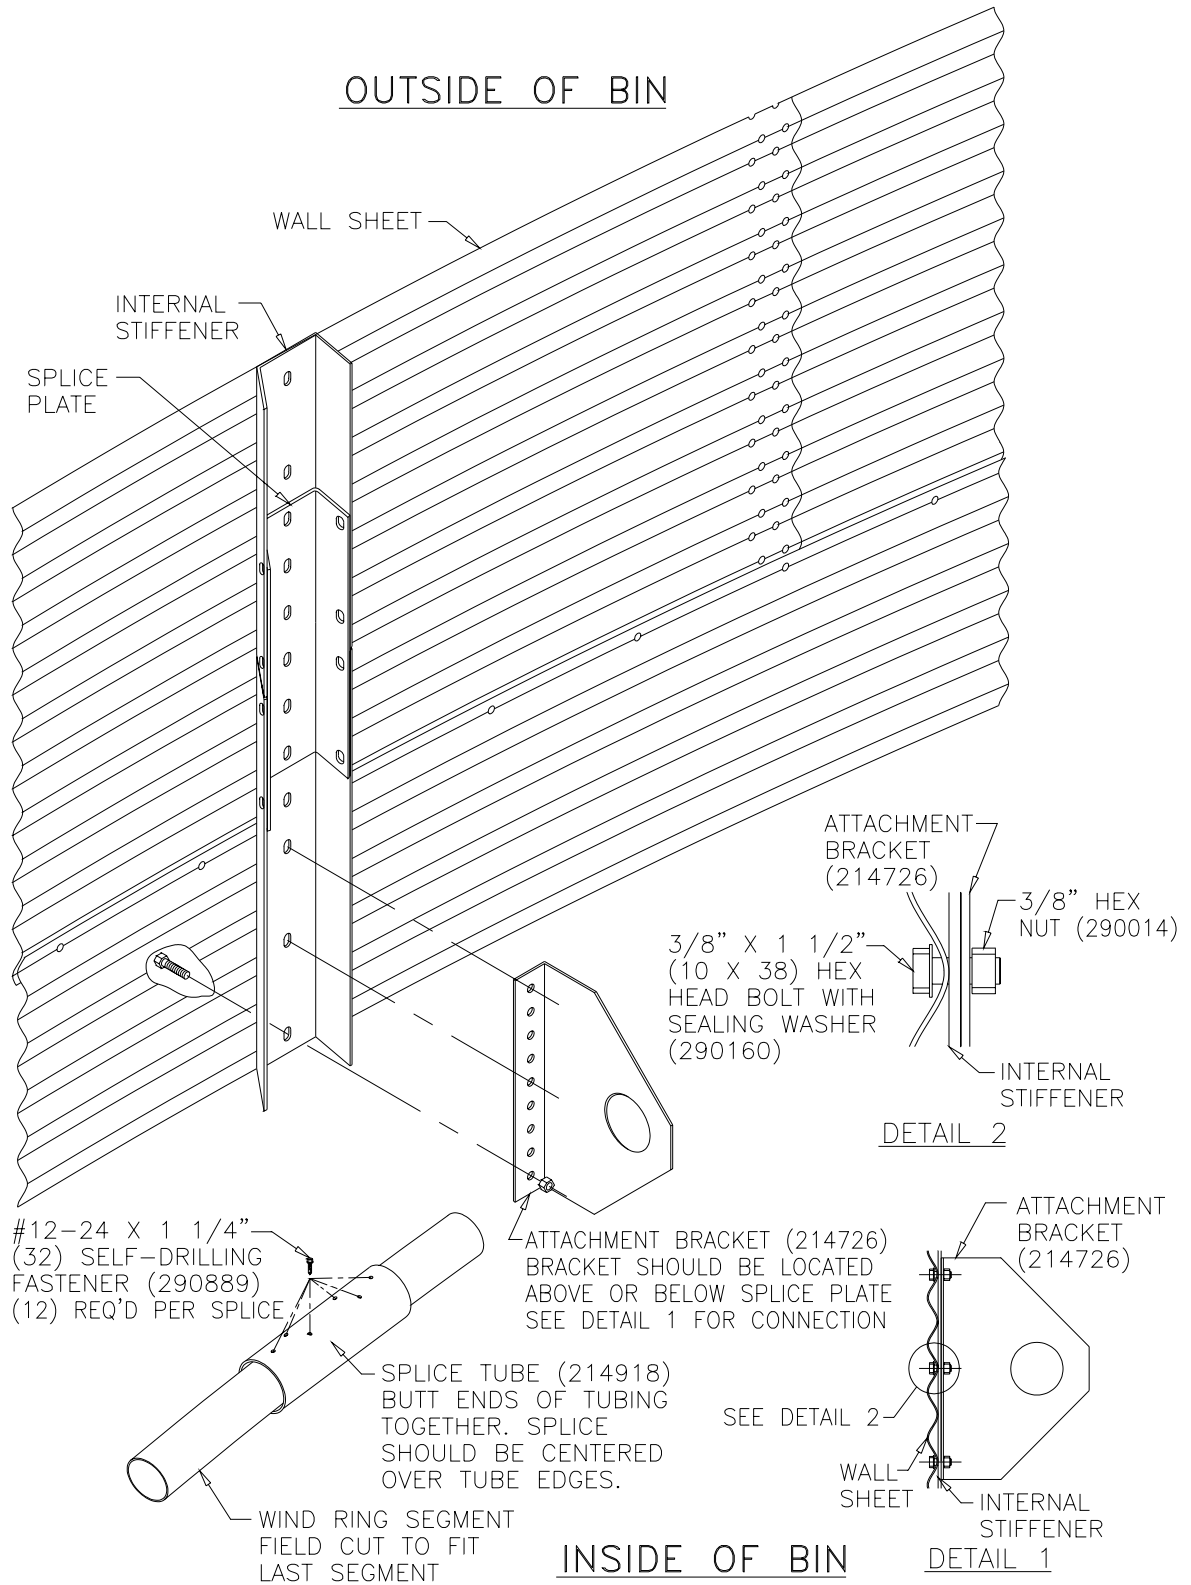

**INTERNALLY STIFFENED BIN WITH INTERNAL WIND RING  
AND SIDE DISCHARGE SYSTEM**

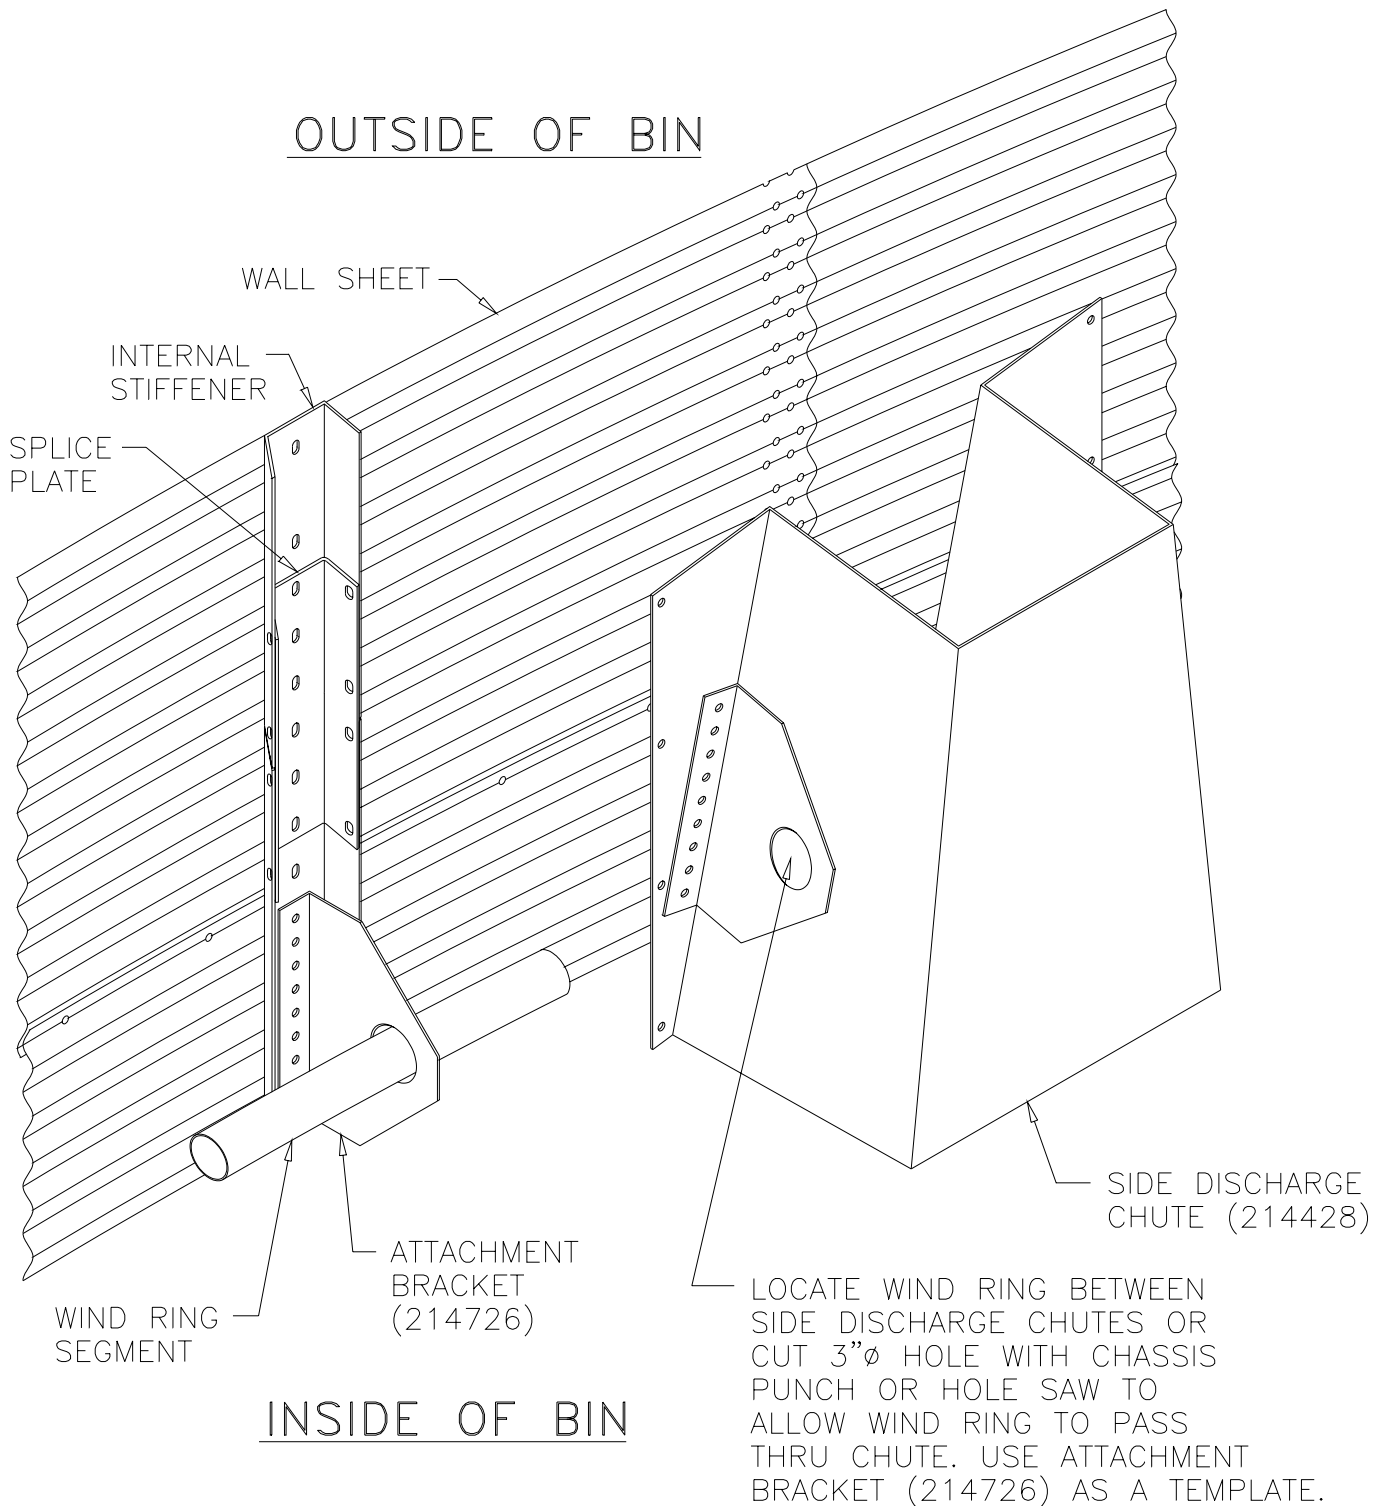



**SCAFCO Grain Systems Company**

6200 E. Main Avenue

PO Box 11215

Spokane, WA 99211-1215, USA