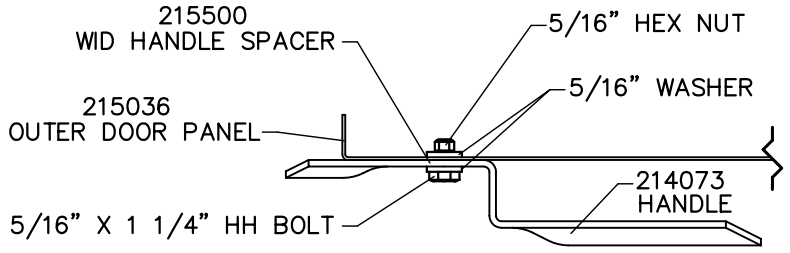

VIEW C

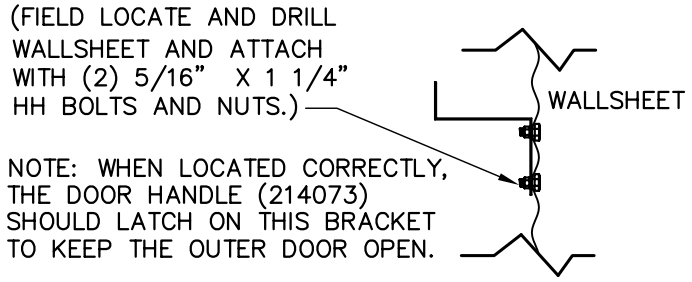

SECTION A–A

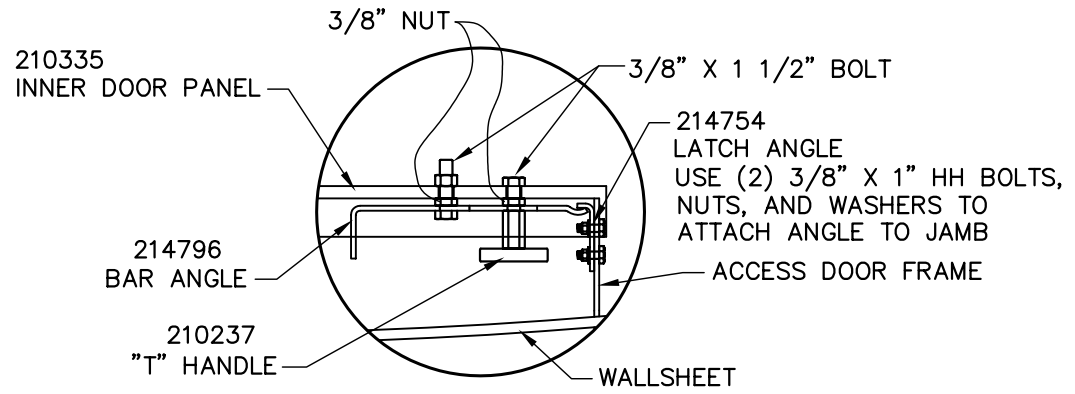

VIEW A

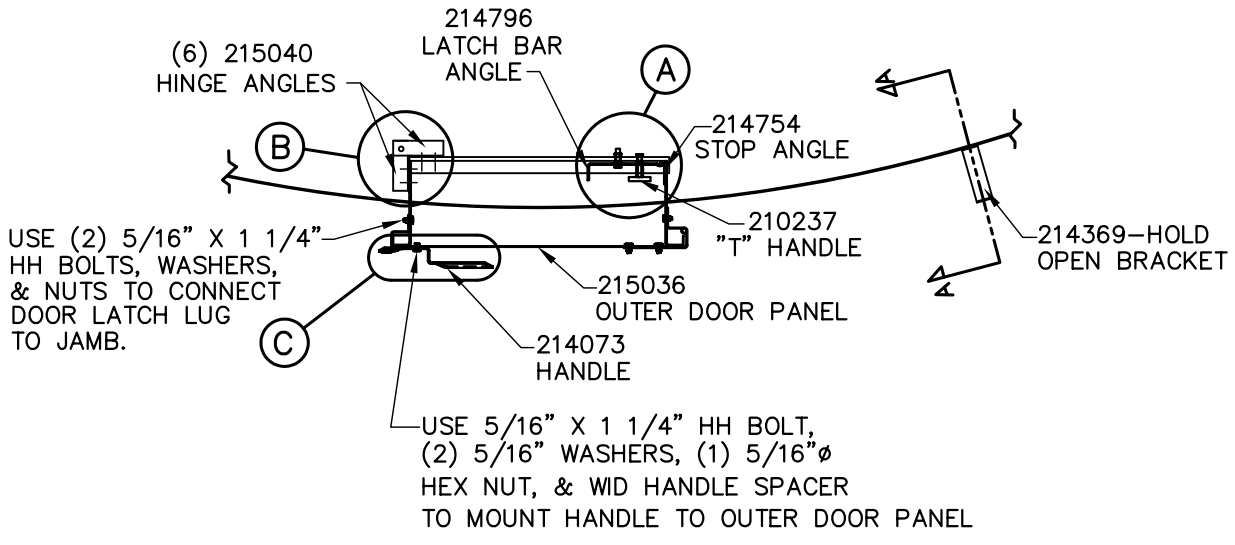

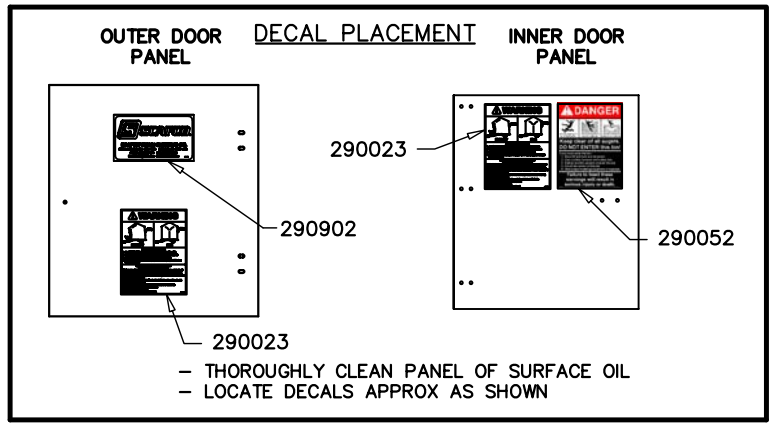

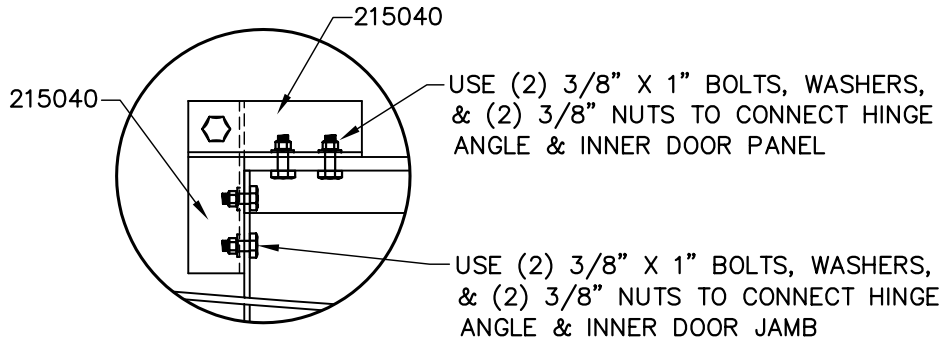

VIEW B

NOTES:

1. HAND TIGHTEN BOLTS AND NUTS TO POSITION EACH PART TO ALLOW FOR ADJUSTMENTS.
2. MAKE ALL NECESSARY ADJUSTMENTS.
3. TIGHTEN BOLTS AND NUTS AFTER ENSURING DOOR PARTS ARE PROPERLY INSTALLED.

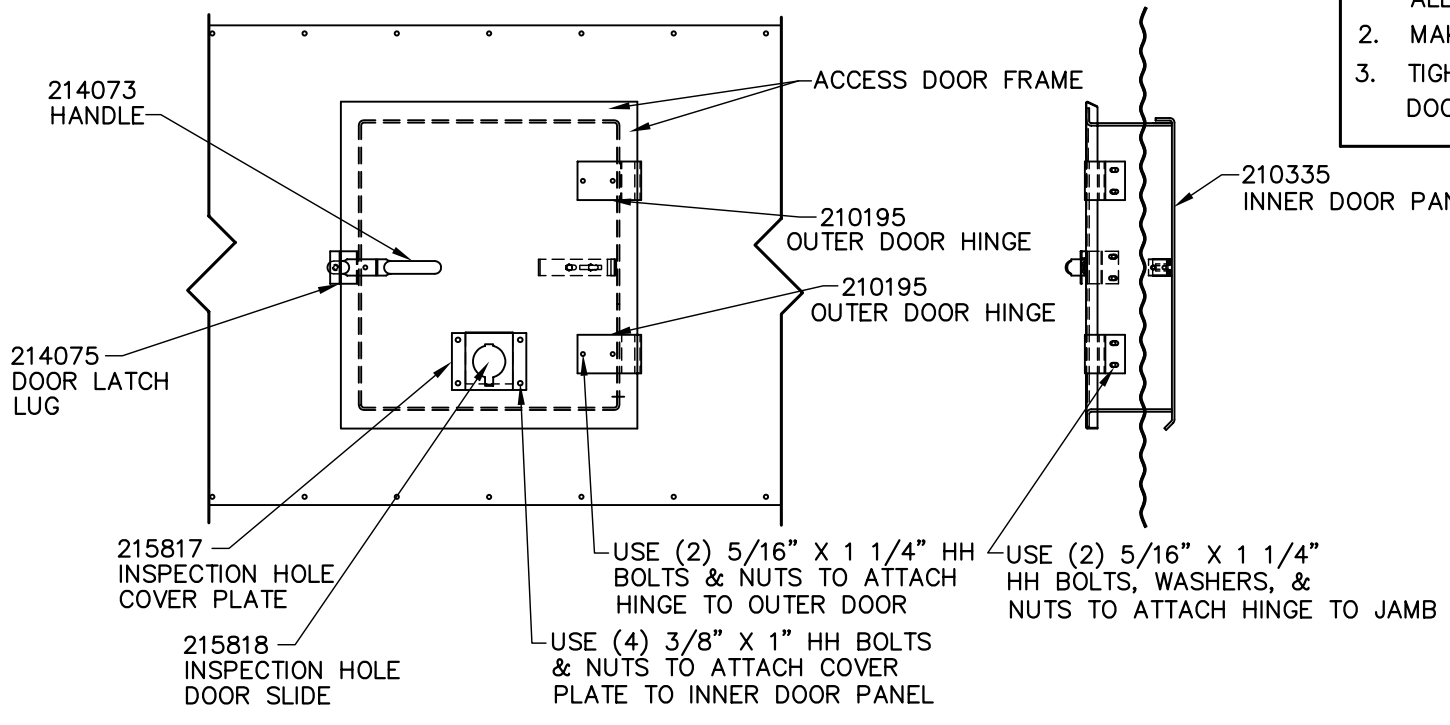

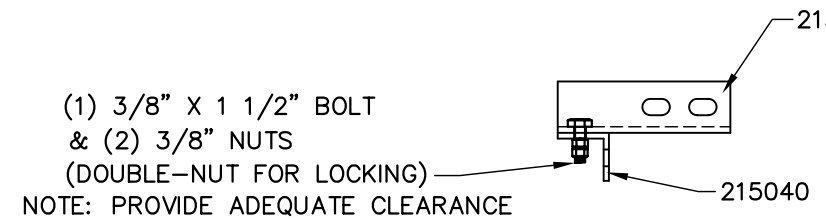

FRONT VIEW

REV.	BY	DATE	DESCRIPTION OF CHANGE
H	EPR	23AUG02	ADDED DECAL PLACEMENT DETAIL
G	EPR	23AUG01	UPDATED CALL OUTS
F	EPR	17AUG01	REMOVED HEADER, SILL AND SIDE STIFFENER PLATES
E	EPR	02AUG01	REMOVED GUSSETS (215598)
D	EPR	12JUN01	UPDATED HEADER, SILL, AND SIDE PLATES, ADDED SPLICE PLATES & GUSSETS
C	DJM	30NOV99	ADDED INSP. WINDOW, WT WAS 176#
B	DJM[JT]	23MAR98	5/16" BOLTS WERE 3/8"
A	DJM	17MAR98	210335 WAS 215039

SCAFCO Grain Systems Company
6200 E. Main Avenue
PO Box 11215
Spokane, WA 99211–1215, USA
Tel: 509–535–1571 * Fax: 509–535–9130 * mail@scafco.com * www.scafco.com

23 1/2" X 26" ACCESS DOOR ASSEMBLY DRAWING

	BY	DATE	DRAWING NO.:	REV.
DRAWN	DJM	25APR97	260000	H
CHECKED				
APPROVED	JT	25APR97	SCALE: 1" = 18"	SHEET: 1 OF 1